

Le invitamos a que se familiarice con el GS19 antes de usarlo. Si tiene preguntas acerca de su uso, llame a nuestro servicio posventa al 1-800-3-CONAIR.



GUARDE ESTAS INSTRUCCIONES

IMPORTANTE PARA USO DOMESTICO SOLAMENTE

- LLENADO DEL DEPÓSITO**
1. Ponga la plancha sobre una superficie segura.
 2. Sostenga el depósito con una mano y deslice el botón de liberación del depósito hacia atrás.
 3. Saque el depósito.
 4. Voltee el depósito y retire el tapón de caucho.
 5. Llene el depósito con agua corriente o filtrada (si el agua está dura).
 6. Cierre el tapón y regrese el depósito sobre la plancha, asegurándose que esté debidamente instalado.


19. Cambie los accesorios con cuidado, puesto que podrían estar calientes o contener agua caliente proveniente de condensación. Asegúrese que estén secos y fríos antes de manipularlos.

INSTRUCCIONES ESPECIALES

20. Nunca desarrugue prendas mientras alguien las tenga puestas.
21. No utilice la función de vapor continuo durante más de 3 segundos. Esto podría provocar un derrame interior y hacer que la suela gotee.

20. Do not iron a garment while it is on person.
21. Do not use continuous steam for more than 10 seconds. A flooding of the steam chamber may occur, causing hot water to drip from the soleplate.

1. Place the unit on a stable surface.
2. While holding the water reservoir with one hand, move the release lever toward the power cord.
3. With the reservoir released, pull up on the reservoir to remove it from the body of the unit.
4. Turn the reservoir over, revealing the rubber inlet cover.
5. Open the inlet cover and fill the tank with everyday tap water (filtered water may reduce hard water problems).
6. Close the inlet cover and return the reservoir to its place, making sure that the reservoir is secure.

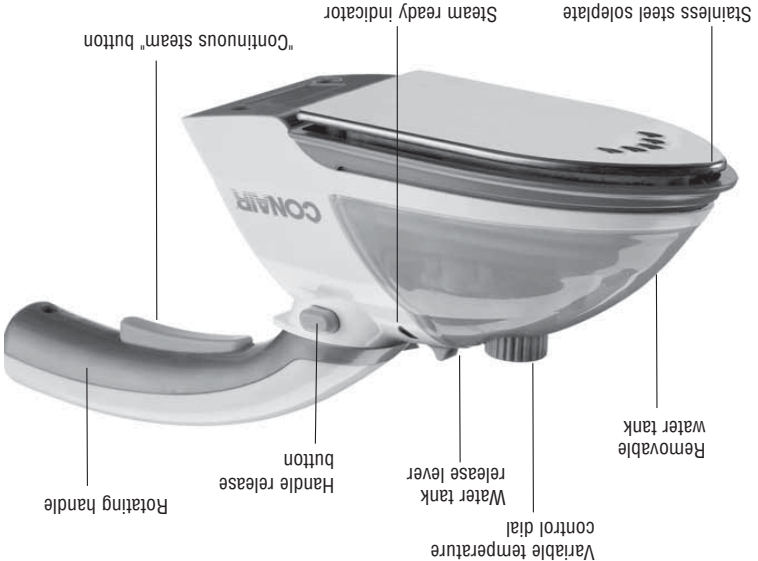

GETTING TO KNOW YOUR STEAMER

MEDIDAS DE SEGURIDAD IMPORTANTES

Siempre que use aparatos eléctricos, especialmente en la presencia de niños, debe tomar precauciones básicas de seguridad, entre las cuales las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO

MANTÉNGALO ALEJADO DEL AGUA

- PELIGRO** — Cualquier aparato enchufado permanece bajo tensión, aunque esté apagado. Para reducir el riesgo de muerte o herida por descarga.
1. Siempre desconecte el aparato inmediatamente después de usarlo.
 2. No coloque ni guarde el aparato donde pueda caer o ser empujado a una bañera o un lavabo.
 3. No coloque el aparato ni lo deje caer al agua u otro líquido.
 4. Si el aparato cayera al agua, desconéctelo inmediatamente. **No toque el agua.**

ADVERTENCIA

Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:

1. **Nunca deje este aparato desatendido mientras esté conectado o sobre una mesa de planchar.**
2. Se debe supervisar cuidadosamente el uso de este aparato cuando esté utilizado por o cerca de niños o personas con alguna discapacidad. El uso sin supervisión podría resultar en un incendio o heridas.
3. Utilice este aparato únicamente con el propósito para el cual fue diseñado y solamente según las instrucciones. Sólo use accesorios recomendados por el fabricante.
4. **Nunca utilice el aparato si el cordón o la clavija estuviesen dañados, si no funcionase correctamente, si hubiese caído, si estuviese dañado o si hubiese caído al agua. No intente reparar el aparato. El ensamblar las partes de manera incorrecta aumenta los riesgos de incendio, electrocución y heridas. Regrese el aparato a un centro de servicio autorizado para que lo examinen y lo reparen.**
5. Mantenga el cordón alejado de las superficies calientes. No jale ni retuerza el cordón alrededor. Enrolle el cordón sin apretar alrededor del aparato para guardarlo. Permita que el aparato enfrie completamente antes de guardarlo.
6. El cable de este aparato está dotado de una clavija polarizada (una pata es más ancha que otra). Como medida de seguridad, se podrá enchufar de una sola manera en el tomacorriente. Si no entrara en el tomacorriente, inviértela. Si aún no entrara completamente, comuníquese con un electricista. No intente vencer esta función de seguridad.

READ ALL INSTRUCTIONS BEFORE USING

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

IMPORTANT SAFETY INSTRUCTIONS

FAMILIARÍCESE CON SU PLANCHA

2. Close supervision is necessary when this appliance is used by, or near children or individuals with certain disabilities. Unsupervised use could result in fire or personal injury.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. Do not attempt to repair the appliance. Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury to persons when the appliance is used. Return the appliance to an authorized service center for examination and repair.**
5. Keep the cord away from heated surfaces. Do not allow cord to contact heated faces. Do not pull or twist cord. Let appliance cool completely before putting away. Loop cord loosely around appliance when storing.
6. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
7. Never drop or insert any object into any opening.
8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
9. Do not use an extension cord to operate appliance.

10. Surfaces of this appliance may be hot when in use. Do not let heated surfaces touch eyes or bare skin.
11. Do not let the soleplate sit on any surface or on the appliance power cord while it is hot or plugged in.
12. Unplug this appliance before filling or emptying. Do not overfill.
13. While emitting steam, this appliance may cause burns if it is used too close to the skin, scalp or eyes, or if it is used incorrectly. To reduce the risk of contact with hot water coming from steam vents, test appliance before each use by holding it away from body.
14. Do not operate steamer without properly filling the water tank.
15. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
16. Burns could occur from touching hot parts, hot water, or steam. Use care when removing water tank or when you turn a steam appliance upside down — there may be hot water in reservoir.
17. To reduce likelihood of circuit overload, do not operate another high wattage appliance on the same circuit.
18. When installing or removing attachment, please be sure the unit is off and no steam is being released to avoid contact with hot water.
19. Use caution when installing or removing attachment as it may contain hot water from condensation. Ensure the attachment is dry or cooled off to avoid contact with hot water.

GS19 before use. If you have any questions about this product, please call our help line at 1-800-3-CONAIR.

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in or on an ironing board.**
2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
3. Do not place in, or drop into water or other liquid.
4. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

